

PANIC ALARM

ecurity is as Close as Your Keys

A person is most likely to be attacked at night while walking to or from their car or home. This compact alarm easily attaches to your keys or clips to your purse or clothing so it's always within reach. Many personal alarms can be difficult to use in a panic situation. The Streetwise Panic Alarm features fast and simple "Squeeze and Scare" operation that allows you to quickly activate the alarm at the same time you grab the unit.

Important: Before the unit will operate, the plastic tab must first be removed from the back. Once removed, discard the plastic tab.

Alarm Operation:

- To activate the alarm, press both sides of the unit at the same time. You do not
 have to continue to press the sides; once activated, the alarm will continue to
 sound until turned off.
- To turn off the alarm press the circular button on the front of the unit.

LED Light Operation:

To turn on the LED Light, press the circular button on the front of the unit. Release the button to turn off the light.

Battery:

This unit requires three (3) LR44 button cell batteries (included). When the light or alarm appears weak, the batteries will need to be replaced. Use a small screw driver to remove the four screws on the back of the unit and insert the new batteries following the polarity diagram.



Made in China