



Personal/Door Alarm and Light (SWPDAL) Instructions



INSTALLING THE BATTERY

The alarm requires one 9-volt battery (not included). To install the battery, simply press the two tabs located on the bottom of the unit while pulling outward. Replace the cover and tighten the screws (screws are located inside the battery compartment).

PERSONAL ALARM OPERATION

To trigger the personal alarm, simply pull the pin upward. The 130dB alarm will sound and the light will flash. To stop the alarm, reinsert the pin. To protect your purse or backpack, place the alarm inside and clip the snap hook to your belt or pants loop. If a thief attempts to steal your purse the alarm will sound.

DOOR OR WINDOW ALARM OPERATION

Replace the pull pin and lanyard with the door clip accessory (included in the package). If batteries are installed the alarm will sound. Remove the black sleeve from the two spring-loaded metal prongs of the door clip and place the two prongs in between the door and the doorjamb (or window and frame). If the door is opened the prongs will separate and the alarm will sound. The feature can also be used to protect a cabinet, show case or anything else that closes.

LIGHT OPERATION

Press and hold the light button on the left side of the unit to turn on the light. Release to turn it off.

LAPTOP ALARM OPERATION

With the door clip feature you can also protect a laptop computer, luggage or many other valuables. Place the two spring-loaded metal prongs on the end of the door clip underneath the item you want to protect. If a thief attempts to steal it the alarm will sound.

WARRANTY

Cutting Edge Products, Inc. extends a ONE-YEAR warranty to the **SWPDAL** for the product against defects in materials or workmanship, with the following exceptions:

1. The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture or water damage, or the affixing of any attachment not provided with the product.
2. The warranty will be voided if the unit has been tampered with in any way (unless by an authorized dealer); or if any unauthorized replacement parts have been used.

CONDITIONS OF SALE

Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

TO OBTAIN SERVICE

Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandize Authorization. The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.