

PERSONAL PROTECTION ALARM

Features:



 Personal Alarm: The alarm can be carried in your purse, pocket, or be attached to your belt using the clip on the back of the unit. In an emergency, pulling the cord will activate the 130 dB alarm. The alarm will draw attention to the situation, scare off a would-be attacker, and summon help.



Purse, Briefcase, or Backpack Alarm:
When the cord is clipped to your belt or
wrapped around your wrist and the alarm is
placed inside your purse, briefcase, or
backpack, the alarm will sound if someone
attempts to take it from you.

Installing the battery:

The alarm requires one 9 volt battery (not included). To install the battery initially, simply press the two tabs located on the bottom of the unit while pulling the bottom of the unit apart. Replace the cover and tighten the screws (screws are located inside the battery compartment).

Streetwise Security Products provides a limited one-year warranty for the SWPPA.

